

YOUR MUSIC. YOUR POWER.





Introduction				
Package contents				
Safety instructions	4			
Technologies				
Low Bass Correction	5			
Ultra Compact PCB	5			
Vibration Absorption Device	6			
I-Power Supply	6			
Assembling and Disassembling the plastic cover	7			
Panels description				
Audio inputs, outputs and controls	8			
Power inputs	9			
Electrical Dimensioning	10			
RCA input and output				
Installation sequence	11			
Gain Setting	12			
Wiring Diagram	13			
Bass Boost set up	14			
Crossovers set up	14			
Technical specs				
Parameters	15			
Dimensional data	15			

5D INTRODUCTION

DEAR CUSTOMER,

CONGRATULATIONS ON ACQUIRING A PRODUCT WITH THE HIGHEST QUALITY AND TECHNOLOGY!

You have just purchased a **SounDigital** product of the highest technology and quality, so we thank you for your confidence.

SounDigital products are made with raw materials of the highest quality standards, and the most modern processes, equipment and technology are used in their production.

On this manual you will learn about the product, its features and characteristics, in order to obtain the best result and to be able to enjoy your music with **SounDigital** quality and power.

To better understand and take advantage of all the functions of the product and use it safely, read this manual carefully and if you have any questions, consult our support by email info@soundigitalusa.com.

PACKAGE CONTENTS

- 1 EVOX Amplifier
- 1 Installation quick guide with warranty card
- 1 Allen wrench 2.5mm
- 1 Allen wrench 4.0mm
- 1 Promotional sticker

SAFETY INSTRUCTIONS

To prevent injuries to the user or damage to the amplifier, read all safety instructions written on this manual;

If you are insecure about the installation of this equipment, get in touch with our tech support or with a professional specialized in car audio installation;

Before proceeding with the installation of any electric equipment on your vehicle, unplug the negative (-) terminal of the battery to avoid fires, injuries or damages;

Use your sound system safely. The continuous exposure to sound pressures over 85dB may cause irreversible hearing damage;

This equipment is for use in automotive DC voltage batteries between 12.6 and 14.4 volts. Before installing the equipment, check voltage of the batteries;

Do not install the amplifier in places exposed to water, dirt or humidity;

Choose a ventilated place to install the amplifier and avoid blocking the side ventilation windows;

Mount the amplifier in a secure way. Avoid mounting it on metallic parts of the vehicle, because it may cause ground looping (noise);

Make sure that the location chosen for the amplifier installation does not effect the operation of the vehicle;

When passing cables through metallic walls, use rubber O-rings to avoid cable cutting and short-circuits.

Clean the amplifier periodically with brush or dry cloth to assure the thermal efficiency of the heatsink.

This product may reach temperatures over 60°C/140°F. Make sure it is cold before touching it;

Be careful when making holes in the vehicle. Make sure you are not making holes in the fuel tank, brake lines or electrical cables of the vehicle

Make sure the cables are properly secured throughout the installation;

Wear gloves, safety glasses and and all necessary PPE during the installation of SounDigital amplifiers.



THIS "WARNING" SIGN ALERTS THE USER OF IMPORTANT INFO. NOT FOLLOWING THIS INSTRUCTIONS MAY CAUSE INJURIES TO THE USER OR DAMAGE TO THE EQUIPMENT.


LOW BASS CORRECTION

The design of the EVOX line of amplifiers aims to give users the feeling of the smooth and deep bass, without compromise! Our Low Bass Correction technology compares the input signals to the amplifier against the output after the amplification stage, making real time correction of the signal, delivering a deeper bass with less distortion.




ULTRA COMPACT PCB

An intelligent layout, with great use of the PCB area and the use of modern components with reduced structure guarantee **SounDigital** products a compact design, at the same time robust and with excellent thermal efficiency.

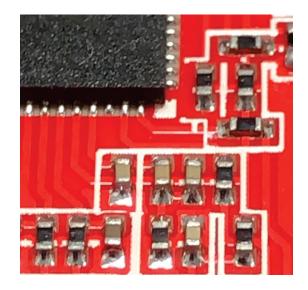

VIBRATION ABSORPTION DEVICE

SounDigital added a new device to the EVO X products which act like shock absorbers reducing the impact of vibration on the eletronic circuit board, thereby increasing the life and reliability of the amplifiers.

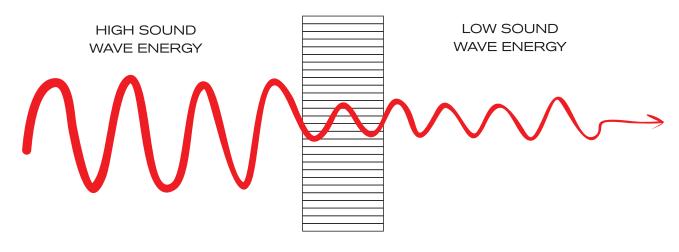

ABSORPTION DEVICE

I - POWER SUPPLY


SounDigital amplifiers are known for their low consumption of battery, and this feature was improved on the **EVOX Line**. The new **I-POWER SUPPLY** is even more modern, which replaces the old toroidal transformers by a new generation of "E-E" core transformers delivers efficiency above 90% *,ensuring more hours of sound without battery recharge.



*Efficiency measured at power supply only


The plastic covers have the function of finishing and hiding the amplifier fixing screws. To disassembling and assembling them, follow the instructions below.

DISASSEMBLING OF THE PLASTIC COVER

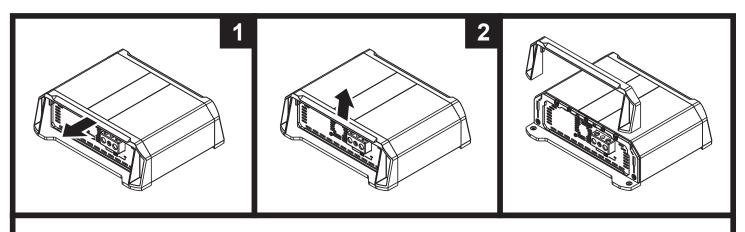


- 1. Carefully pull out the top of plastic cover to release the upside latches, as shown in the picture 1.
 - 2. Slide up the plastic cover in a continuous movement to remove it.


ASSEMBLING THE PLASTIC COVER

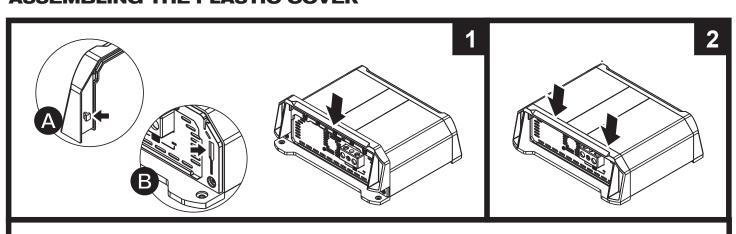

- To fit the plastic cover back, carefully insert the point A of the plastic cover into point B of the amplifier, slowly sliding it down.
- 2. Gently press the sides of the top of the plastic cover towards the bottom of the amplifier until you hear a clicking noise.

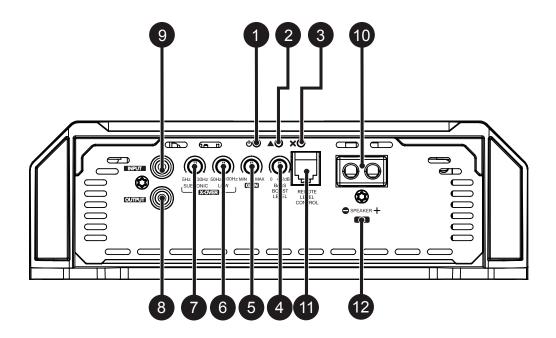

1 Blue "Power ON" LED indicator 2 Yellow "Clip" LED indicator 3 Red "Protection" LED indicator 4 - Variable Bass Boost Control 50Hz (0dB ~ +12dB) 5 - Variable Gain control 6 - Variable Low Pass filter control (50Hz ~ 500Hz) 7 - Variable Subsonic filter control (5Hz ~ 30Hz) 8 Output Audio RCA connector 9 Input 10 - Speaker output connector 11 - Remote level control connector 12 - Minimun speaker load allowed (impedance)				
Red "Protection" LED indicator Variable Bass Boost Control 50Hz (0dB ~ +12dB) Variable Gain control Variable Low Pass filter control (50Hz ~ 500Hz) Variable Subsonic filter control (5Hz ~ 30Hz) Output Audio RCA connector Input Speaker output connector Remote level control connector	1	Blue	"Power ON" LED indicator	
Variable Bass Boost Control 50Hz (0dB ~ +12dB) Variable Gain control Variable Gain control Variable Low Pass filter control (50Hz ~ 500Hz) Variable Subsonic filter control (5Hz ~ 30Hz) Output Audio RCA connector Input Speaker output connector Remote level control connector	2	Yellow	"Clip" LED indicator	
5 - Variable Gain control 6 - Variable Low Pass filter control (50Hz ~ 500Hz) 7 - Variable Subsonic filter control (5Hz ~ 30Hz) 8 Output 9 Input 10 - Speaker output connector 11 - Remote level control connector	3	Red	"Protection" LED indicator	
- Variable Low Pass filter control (50Hz ~ 500Hz) 7 - Variable Subsonic filter control (5Hz ~ 30Hz) 8 Output 9 Input 10 - Speaker output connector 11 - Remote level control connector	4	-	Variable Bass Boost Control 50Hz (0dB ~ +12dB)	
7 - Variable Subsonic filter control (5Hz ~ 30Hz) 8 Output 9 Input 10 - Speaker output connector 11 - Remote level control connector	5	-	Variable Gain control	
8 Output 9 Input 10 - Speaker output connector 11 - Remote level control connector	6	-	Variable Low Pass filter control (50Hz ~ 500Hz)	
Audio RCA connector Input Speaker output connector Remote level control connector	7	-	Variable Subsonic filter control (5Hz ~ 30Hz)	
9 Input 10 - Speaker output connector 11 - Remote level control connector	8	Output	Audio PCA connector	
11 - Remote level control connector	9	Input	Addio NoA connector	
	10	-	Speaker output connector	
12 - Minimun speaker load allowed (impedance)	11	-	Remote level control connector	
	12	-	Minimun speaker load allowed (impedance)	

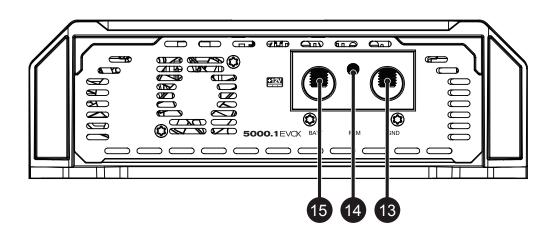

13	-	Negative power supply connector (GND)
14	-	Remote power supply connector (REM)
15	-	Positive power supply connector (+12VDC)

ELECTRICAL DIMENSIONING


For proper operation of your SounDigital amplifier, you need the proper dimensioning of the electrical system and the cables used.

The table below shows the minimum section of GND cables, +12VDC cables and speaker output cables according to the power generated by the amplifier.


5000 WRMS	POWER CABLE GROUND CABLE	50mm² - 0 AWG
	SPEAKER CABLE	2 x 2.5mm² - 13 AWG

RCA INPUT AND OUTPUT


Exemple of one RCA cable connection only

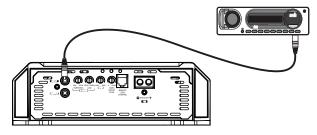

Example of two RCA cables connection (mono input).

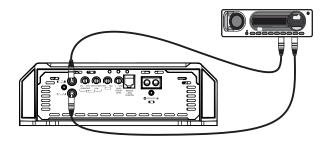

Example of one RCA cable connection only and using the RCA output to connect another amplifier.

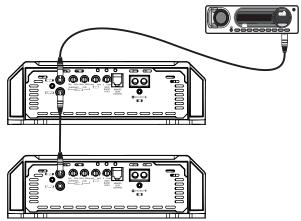




BEFORE PROCEEDING WITH THE INSTALLATION, UNPLUG THE NEGATIVE TERMINAL FROM ALL OF THE BATTERIES, TO AVOID FIRE, DAMAGE TO THE AMPLIFIER AND THE Warning! USER HIMSELF.

- Mount the amplifier in such a way you have access to the connectors;
- Install the power cables in the vehicle properly, starting from the battery to the fuse holder or circuit breaker, use the cable with the appropriate size. Make all connections, install fuse holders or circuit breakers, but without placing the fuses or with the circuit breakers in the "Off" position.



THE MAX. DISTANCE FOR THE INSTALLATION OF THE FUSE/CIRCUIT BREAKER IS ONE FOOT (30 CM) AWAY FROM THE BATTERY.

 - Connect the power cables in to the amplifier, observing the polarity. Connect all the positive cables from the fuse holder or circuit breaker to the positive conector of the amplifier and all the negative power cables from the batteries to the negative connector of the amplifier;
- The ground cable must be as short as possible and must be connected to the vehicle chassis and the battery negative;



- Install the signal input cables in a proper way, distant from the power cables;
- Connect the RCA or the high signal input cables to the head unit and amplifiers;
- Install the audio output cables with the appropriate section, distant from the power and audio input cables;
- Connect the audio output cables to the amplifier and speakers respecting the positive (+) and negative (-) polarities;
- Install the remote cable with the power cables, using 1.5mm² (15 AWG) cable or thicker;
- Connect the remote power cable to the amplifier's "REM" terminal at the main unit's remote power output (when not using the high level signal inputs);
- Before powering the system, verify all the connections and make sure there are no mistakes or short-circuits on the power and ground cables;
- Reconnect the ground of the batteries;
- Check if the headunit is turned off and then place the fuses in the fuse holders or switch the circuit breakers on;
- Turn on the main unit and the amplifier will turn on the "On" LED indicating that it is in operation.

5D GAIN SETING

Necessary equipament:


- Digital AC voltmeter;
- Media with sine wave test tone 60Hz recorded at 0db;
- Screwdriver 1/8" (for gain set)

Set up procedure

- Turn the gain control all the way down.
- Disconnect the output cables from the amplifier outputs;
- Turn off all processing (bass, treble, loudness, EQ, etc.);
- Set the source unit volume to 3/4 of full volume.
- Set the source unit's fader control to center position;
- Set the variable "LOW" crossover in 500Hz and the "SUBSONIC" in 5Hz;

- Use a 60 Hz sine wave
- Increase the gain control until the "CLIP" LED starts blinking;
- Return the gain to the limit where the "CLIP" LED stops blinking and remains off;
- Once you have adjusted the amplifier to its correct voltage output, turn off the source unit and reconnect the speaker(s)


Download the tracks for set up in https://soundigitalusa.com/tracks-for-set-up/

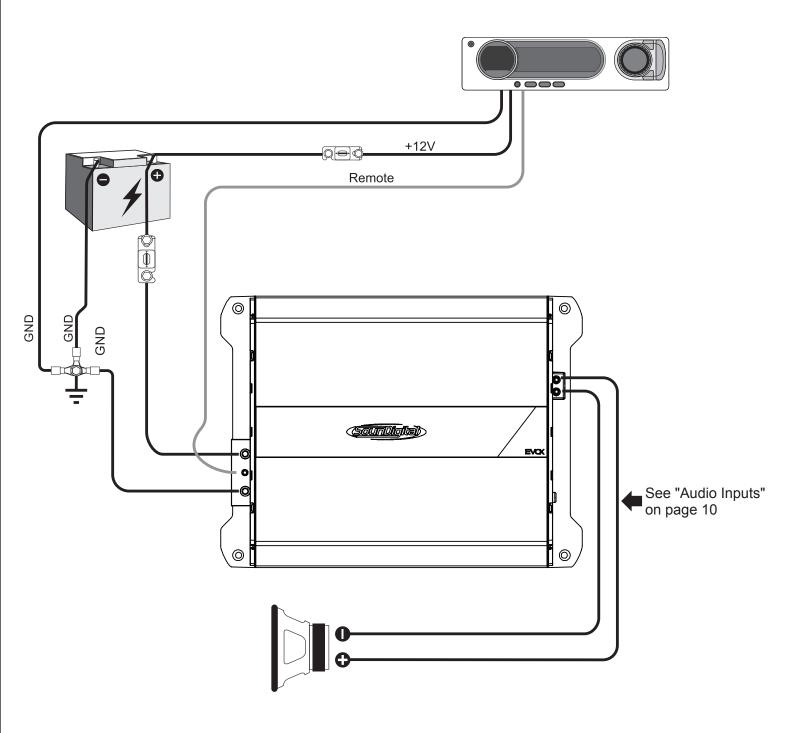

Using Bass Boost

The Amplifier Bass Boost setting enables the user to boost the sound intensity at low frequencies of the sound system, where boost intensity can be adjusted.

This is a semi-parametric equalizer type circuit with "Q" value for the fixed filter, with an intensity boost adjustment from 0 to + 12dB (16 times), and a central frequency adjustment of the filter in 50Hz, making it versatile for several types of sound systems.

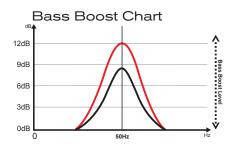

How to Adjust Bass Boost




Reproduce your favorite song and set the boost intensity between 0dB and +12dB at the variable control level according your preference.


How to Adjust the Crossovers



Set in the "SUBSONIC" variable control between 5Hz and 30Hz ("A") where you want to perform the subsonic cut filter;

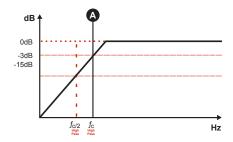


Set in the "LOW" variable control between 50Hz and 500Hz ("B") where you want to perform the low pass cut filter;

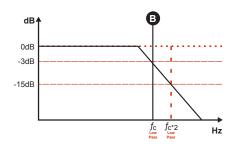


PARAMETERS	5000.1 EVCX1Ω	5000.1 <mark>E</mark> VCX2Ω
Power RMS @ 4Ω*	1 X 2178W	1 X 3300W
Power RMS @ 2Ω*	1 X 3300W	1 X 5000W
Power RMS @ 1Ω*	1 X 5000W	N/A
Frequency Response (-3dB)	5Hz ~ 500Hz	5Hz ~ 500Hz
Low Pass filter (12dB/oct)	50Hz ~ 500Hz	50Hz ~ 500Hz
Subsonic filter (12dB/oct)	5Hz ~ 30Hz	5Hz ~ 30Hz
Operating Voltage	8V ~ 16V	8V ~ 16V
SNR	84dB	84dB
Input Sensitivity	0.2 ~ 4V	0.2 ~ 4V
Current Draw (Music)	254A	254A
Current Draw (Max)	509A	509A
Total Efficiency	78%	78%
Damping Factor (@100Hz nominal impedance)	200	200
Minimum Impedance	1Ω	2Ω
Fuse (music)	250A	250A
Recommended batery	250Ah	250Ah

^{*}Power at 12.6V @ 60Hz with a maximum THD of 1%.

DIMENSIONAL DATA

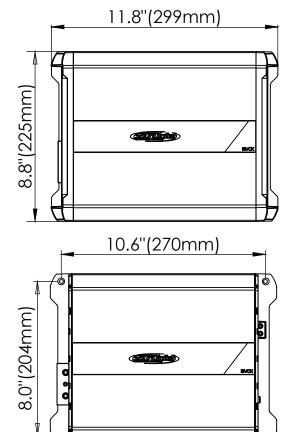

 Net Weight: 7.3lb (3.3 kg) Gross Weight: 7.9lb (3.6 kg)





YOUR MUSIC. YOUR POWER.



Consumer Technology Association









