

OWNER'S MANUAL 2000.4 EV.

ntroduction	. 3
Package contents	. 3
Safety instructions	. 4
Assembling and Disassembling the plastic cover	. 5
Panels description	
Audio inputs and controls	. 6
Power inputs and audio outputs	. 7
nstallation sequence	. 8
Electrical Dimensioning	. 9
Audio inputs	
RCA inputs	. 9
Viring diagram	
Four channels wiring diagram	10
Three channels wiring diagram	10
Two channel wiring diagram	11
Procedure for setting the Gain	11
Crossovers set up	12
Battery connection diagram	13
Technical specifications	
Parameters	14
Dimensional data	14
Additional Information	14

Dear Consumer,

Congratulations, you have just acquired a SounDigital product of the highest technology and quality, so we thank you for your trust.

SounDigital products are made with raw materials of the highest quality standards, and the most modern processes, equipment and technology are used in their production.

IMPORTANT INFORMATION

On this manual you will learn about the product, its features and characteristics, in order to obtain the best result and to be able to enjoy your music with SounDigital quality and power.


Read this manual carefully and follow precisely all the information contained therein, these are very important and allow your amplifier to work optimally. If you think it is necessary, please do not hesitate to contact our technical support at the following contact:

info@soundigitalusa.com

PACKAGE CONTENTS

- 01 2000.4 EVO5 amplifier
- 01 Quick installation guide with warranty certificate
- 01 Promotional sticker


To avoid injury to the user or damage to the amplifier, read all safety instructions written on this manual.

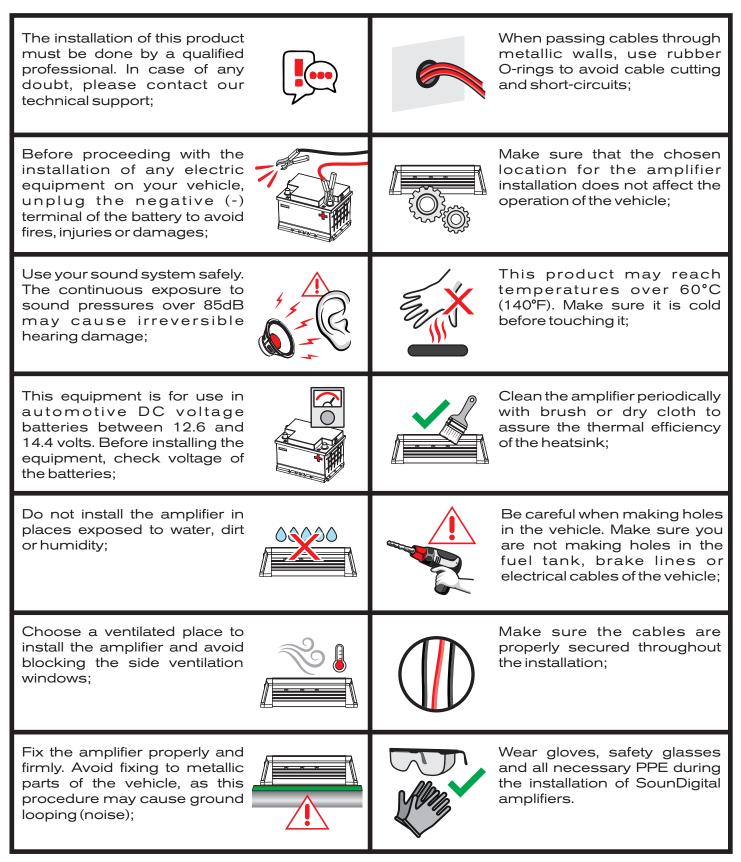




THIS "WARNING" SIGN ALERTS THE USER OF IMPORTANT INFO. NOT FOLLOWING THESE INSTRUCTIONS MAY CAUSE INJURIES TO THE USER OR DAMAGE TO THE EQUIPMENT. The plastic covers have the function of finishing and hiding the amplifier fixing screws. To disassembling and assembling them, follow the instructions below.

DISASSEMBLING OF THE PLASTIC COVER

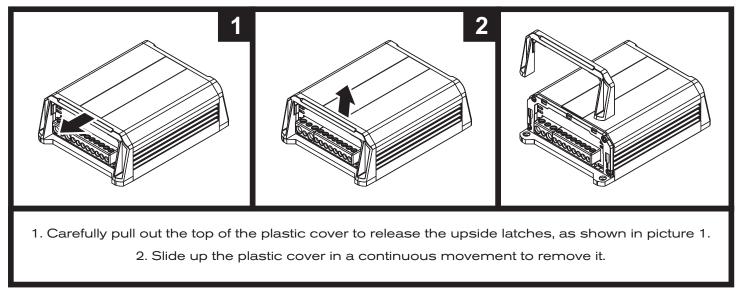


*Merely illustrative images.


ASSEMBLING THE PLASTIC COVER

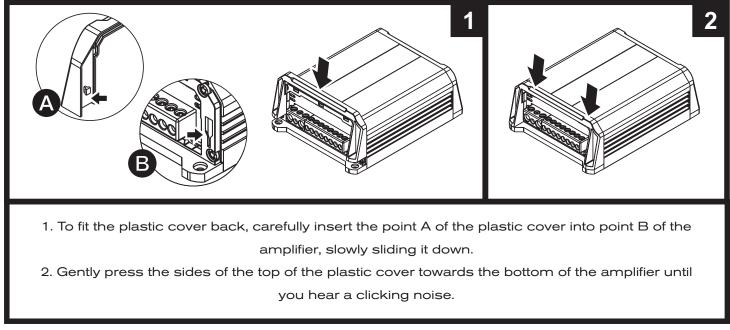

*Merely illustrative images.

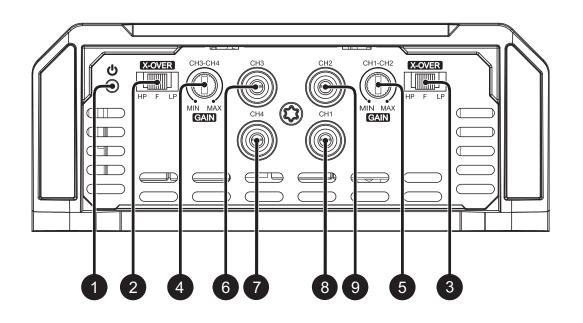

1	Blue	"POWER ON" LED indicator
2 3	CH3/CH4 CH1/CH2	Crossover switch key High Pass – Full – Low Pass
4 5	CH3/CH4 CH1/CH2	Variable Gain control
6 7 8 9	CH3 CH4 CH1 CH2	Audio input – RCA connectors

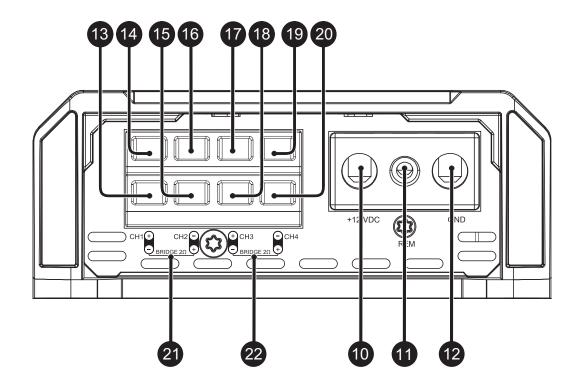

10	-	Positive power supply connector (+12VDC)		
11	-	Remote power supply connector (REM)		
12	-	Negative power supply connector (GND)		
13 14	Speakers output connectors	Negative speaker connector (-) Positive speaker connector (+)		
15 16	Speakers output connectors	Positive speaker connector (+) Negative speaker connector (-)		
17 18	Speakers output connectors	Positive speaker connector (+) Negative speaker connector (-)		
19 20	Speakers output connectors	Negative speaker connector (-) Positive speaker connector (+)		
21 22	CH1/CH2 CH3/CH4	Minimum speaker load allowed in BRIDGE (impedance)		



BEFORE PROCEEDING WITH THE INSTALLATION, UNPLUG THE NEGATIVE TERMINAL FROM ALL OF THE BATTERIES, TO AVOID FIRE, DAMAGE TO THE AMPLIFIER AND THE Warning! USER HIMSELF.


- Mount the amplifier in such a way you have access to the connectors; \triangleright
- Install the power cables in the vehicle properly, starting from the battery to the fuse holder or circuit breaker, use the cable with the appropriate size. Make all connections, install fuse holders or circuit breakers, but without placing the fuses or with the circuit breakers in the "OFF" position;



THE MAXIMUM DISTANCE FOR THE INSTALLATION OF THE FUSE/CIRCUIT BREAKER IS 12 INCHES (30cm) AWAY FROM THE BATTERY.

- ≻ Connect the power cables in to the amplifier, observing the polarity. Connect all the positive cables (+) from the fuse holder or circuit breaker to the positive conector of the amplifier and all the negative power cables from the batteries to the negative connector of the amplifier;
- The ground cable must be as short as possible and must be connected to the vehicle chassis and the battery negative;

Remove the paint between the terminal and chassis

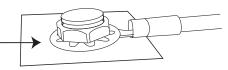


- Install the signal input cables in a proper way, distant from the power cables;
- Connect the RCA or the high level signal input cables to the head unit and amplifiers;
- Install the audio output cables with the appropriate section, distant from the power and \geq audio input cables;
- \geq Connect the audio output cables to the amplifier and speakers respecting the positive (+) and negative (-) polarities;
- Install the remote cable with the power cables, using 1.5mm² (15 AWG) cable or thicker; \geq
- Connect the remote power cable to the amplifier's "REM" terminal at the main unit's remote \geq power output (when not using the high level signal inputs);
- \geq Before powering the system, verify all the connections and make sure there are no mistakes or short-circuits on the power and ground cables;
- Reconnect the ground of the batteries; \geq
- \geq Check if the head unit is turned off and then place the fuses in the fuse holders or switch the circuit breakers on;
- Turn on the main unit and the amplifier will turn on the "POWER ON" LED indicating that it is in operation.



Minimum recommended installation distance between amplifiers*.

1.18in. (30mm)

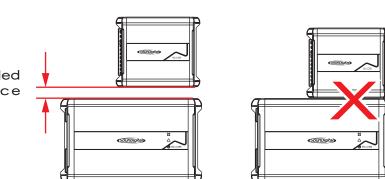

*For installations with more than one amplifier, second unit not included. Merely illustrative images.

ELECTRICAL DIMENSIONING

For proper operation of your SounDigital amplifier, you need the proper dimensioning of the electrical system and the cables used.

The table below shows the minimum section of GND cables, +12VDC cables and speaker output cables according to the power generated by the amplifier.


2000	POWER CABLE (+12VDC) GROUND CABLE (GND)	21mm² (4 AWG)
WRMS	SPEAKER CABLE	2 x 2mm² (12 AWG)

We recommend the use of only OFC (Oxygen Free Copper) cables on the installation of our products.

Copper-clad aluminum wire (CCAW) must not be used.

AUDIO INPUTS


RCA inputs

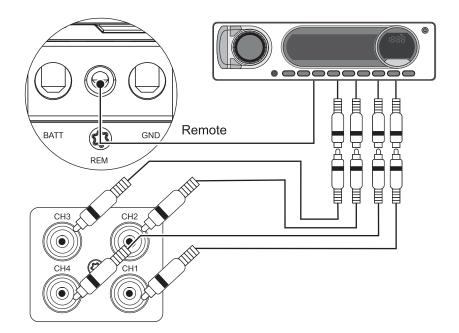




All RCA inputs must be connected for the amplifier to work properly. If the signal source is mono type, use "Y" cable at the input.

4 CHANNELS WIRING DIAGRAM (Per channel)

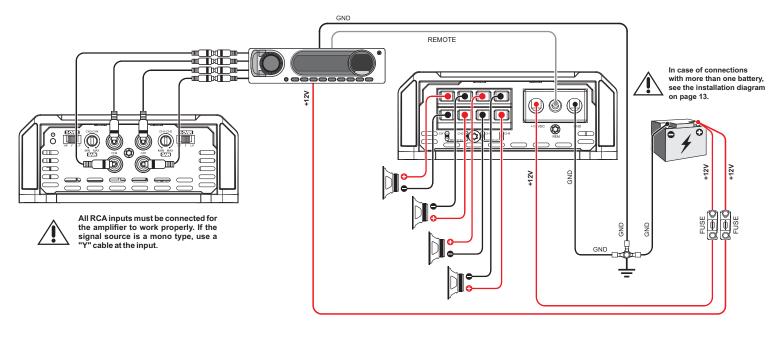


	Minimum impedance of use according to the model		
Model	Per channel	Bridge	
2000.4 Ε√ጋ5 2Ω	1Ω	2Ω	
2000.4 Ε\J5 4Ω	2Ω	4Ω	

3 CHANNELS WIRING DIAGRAM

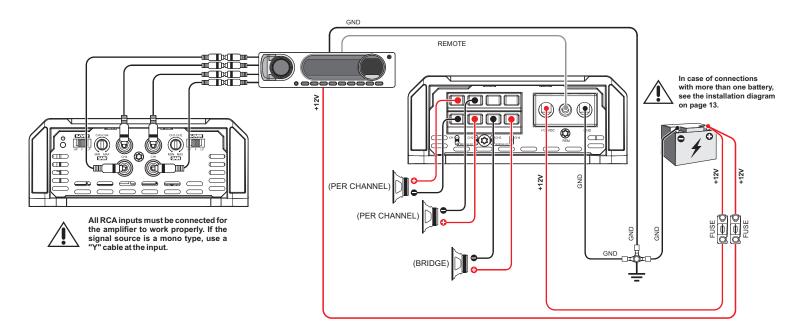

	Minimum impedance of use according to the model		
Model	Per channel	Bridge	
2000.4 Ε√ጋ5 2Ω	1Ω	2Ω	
2000.4 Ε√05 4Ω	2Ω	4Ω	

2 CHANNELS WIRING DIAGRAM (Bridge)

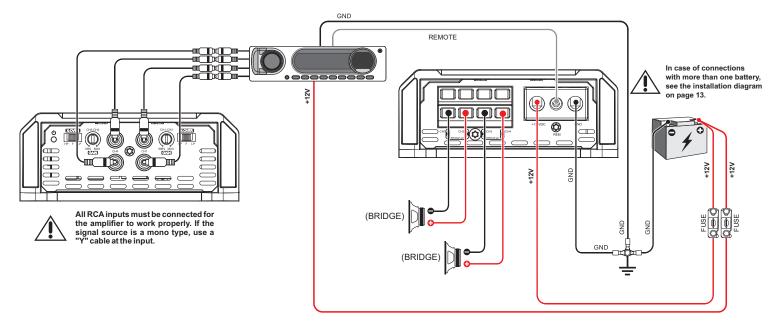

	Minimum impedance of use according to the model	
Model	Per channel	Bridge
2000.4 Ε√ጋ5 2Ω	1Ω	2Ω
2000.4 Ε√ጋ5 4Ω	2Ω	4Ω

GAIN SETTING

Necessary equipament:

- Digital AC voltmeter;
- Media with sine wave test tone 60Hz recorded at 0db.

Set up procedure:

- This procedure is the same for both gain controls;
- > Turn the gain control all the way down;
- Disconnect the output cables from the amplifier outputs;
- Turn off all processing (bass, treble, loudness, EQ, etc.);
- Set the audio player volume to 3/4 of full volume;

- On the audio player, set the fader control to center position;
- > Set the crossover selector switch in "F";
- Use a 60Hz sine wave;
- Connect the AC voltmeter to the speaker output connectors of the amplifier. Make sure you test the voltage at the correct connectors (+ and -);
- Increase the gain control until the target voltage is observed with the voltmeter (see the chart below);
- Once you have adjusted the amplifier to the correct voltage output, turn off the source unit and reconnect the speaker(s).


MODEL	STEREO / POWER	BRIDGE / POWER	STEREO OUTPUT VOLTAGE	BRIDGE OUTPUT VOLTAGE
2000.4 EVJ5 20	1Ω / 500W	2Ω/1000W	22.36V	44.72V
2000.4 ΕVD5 4Ω	2Ω / 500W	4Ω / 1000W	31.62V	63.24V

Download the tracks for set up in https://soundigitalusa.com/tracks-for-set-up/




"F" All the frequencies will be reproduced "LP" Frequencies below 80Hz will be reproduced "HP" Frequencies above 80Hz will be reproduced


> Change the switch to "F" position (Full Range) - All the frequencies will be reproduced as in "Figure 1";

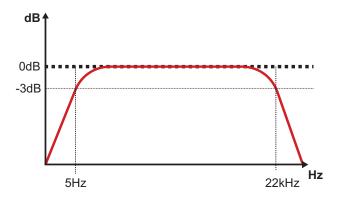

> Change the switch to "HP" position - All frequencies above 80Hz will be reproduced as in "Figure 2";

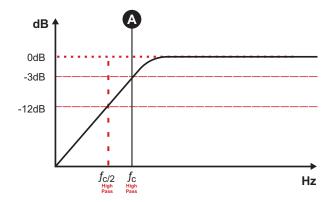


> Change the switch to "LP" position - All frequencies below 80Hz will be reproduced as in "Figure 3".

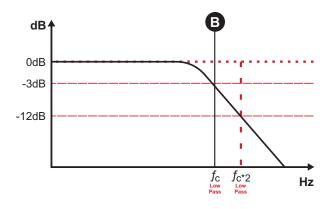

When necessary the association of one or more battery banks to supply the necessary current to the amplifier, it is recommended to use batteries of the same brand, model, and if possible the same manufacturing lot so that the system has the maximum performance.

For an ideal energy performance, we recommend that all batteries be connected to positive and negative busbars and the busbars connected to the amplifier, as shown in the diagram below:

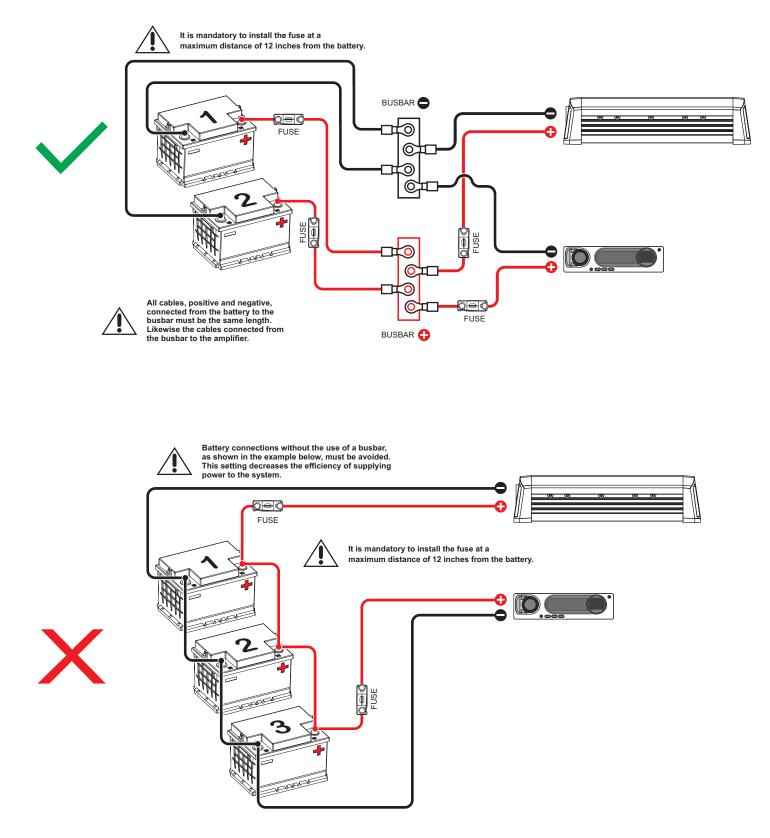


PARAMETERS	2000.4 Εν ΟΕ 2Ω	2000.4 E√⊃ 5 4Ω
Power RMS @ 2Ω**	4 x 330W	4 x 500W
Power RMS @ 1Ω**	4 x 500W	N/A
Power RMS (Bridge) @ 4Ω**	2 x 660W	2 x 1000W
Power RMS (Bridge) @ 2Ω**	2 x 1000W	N/A
Frequency Response (-3dB)	10Hz ~ 22kHz	10Hz ~ 22kHz
Low Pass Filter (12dB/octave)	80Hz	80Hz
High Pass Filter (12dB/octave)	80Hz	80Hz
Operating Voltage	8V ~ 16V	8V ~ 16V
SNR	90dB	90dB
Input Sensitivity (RCA)	0.2V ~ 4V	0.2V ~ 4V
Input Sensitivity (High Level input)	N/A	N/A
Current Draw (music)	91A	91A
Current Draw (max.)	182A	182A
Total Efficiency	87%	87%
Damping Factor (@100Hz nominal impedance)	200	200
Power Cable	21mm² (4 AWG)	21mm² (4 AWG)
Speaker Cable	2 x 2mm² (12 AWG)	2 x 2mm² (12 AWG)
Recommended Fuse* (music)	100A	100A
Recommended Battery (minimum)	100Ah	100Ah

*It is mandatory to install the fuse at a maximum distance of 12 inches from the battery. **Power at 12.6V @ 60Hz with a maximum THD of 1%.



**POWER RATING ACCORDING TO CTA-2006 INDUSTRY STANDARDS.

DIMENSIONAL DATA

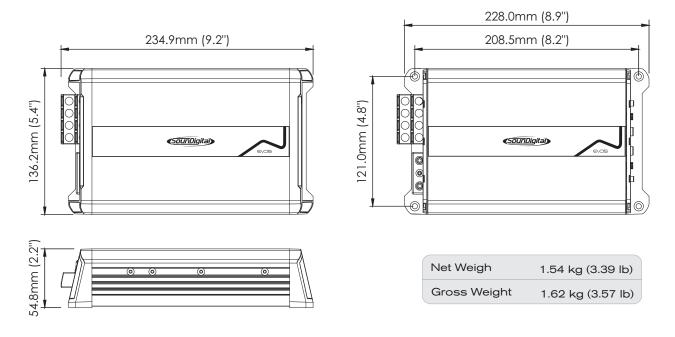

ADDITIONAL INFORMATION

The values presented are based on measurements performed in SounDigital's laboratories. All the equipment used in the assays, tests, measurements and gauging of the technical parameters of SounDigital products were calibrated in certified laboratories, thus ensuring the performance and standard of excellence of the developed products.

The Manufacturing Process may present variations, and the electronic components may also present changes in values in relation to their nominal parameters. Thus, causing small differences between measurements taken. Small variations in the values presented and divulged by SounDigital are recognized.

Updates of information made in this document will always be published and made available for consumer consultation, free of charge, on the brand's websites. The user is advised to search for the manual in its latest version when necessary.

The images presented in this document are representative and merely illustrative; therefore, they do not necessarily correspond to the actual product/model.



YOUR MUSIC. YOUR POWER.













