

OWNER'S MANUAL 1200.1



ntroduction
Package contents
Safety instructions
Technologies
DTM [®]
Ultra compact PCB5
Robust construction5
I-Power Supply5
VAS [®] 6
Marinization with protection index IP646
Assembling and Disassembling the Plastic Seals7
Panels description
Audio inputs and controls8
Power inputs and audio outputs9
nstallation sequence
Electrical Dimensioning
Audio inputs
RCA inputs
Bass Boost and Crossover set up
Niring diagram
Procedure for setting the gain
Battery connection diagram
Technical specifications
Parameters
Dimensional data
Additional Information

Dear Consumer,

Congratulations, you have just acquired a SounDigital product of the highest technology and quality, so we thank you for your trust.

SounDigital products are made with raw materials of the highest quality standards, and the most modern processes, equipment and technology are used in their production.

IMPORTANT INFORMATION

On this manual you will learn about the product, its features and characteristics, in order to obtain the best result and to be able to enjoy your music with SounDigital quality and power.

Read this manual carefully and follow precisely all the information contained therein, these are very important and allow your amplifier to work optimally. If you think it is necessary, please do not hesitate to contact our technical support at the following contact:

🕑 info@soundigitalusa.com


FEATURES

- Resistant to moisture, water splash and dust;
- Compact design;
- Conformal coated PCB;
- Variable crossover controls;
- High efficiency Class D;
- Robust construction, resistant to vibrations and bumps;
- IP64 rating.

PACKAGE CONTENTS

- 01 1200.1 EVOPS amplifier
- 01 Quick installation guide with warranty certificate
- 01 Allen wrench 2.0mm
- 01 Allen wrench 2.5mm
- 01 Allen wrench 3.0mm
- 01 Soundigital promotional black sticker
- 01 Soundigital promotional white sticker


To avoid injury to the user or damage to the amplifier, read all safety instructions written on this manual.

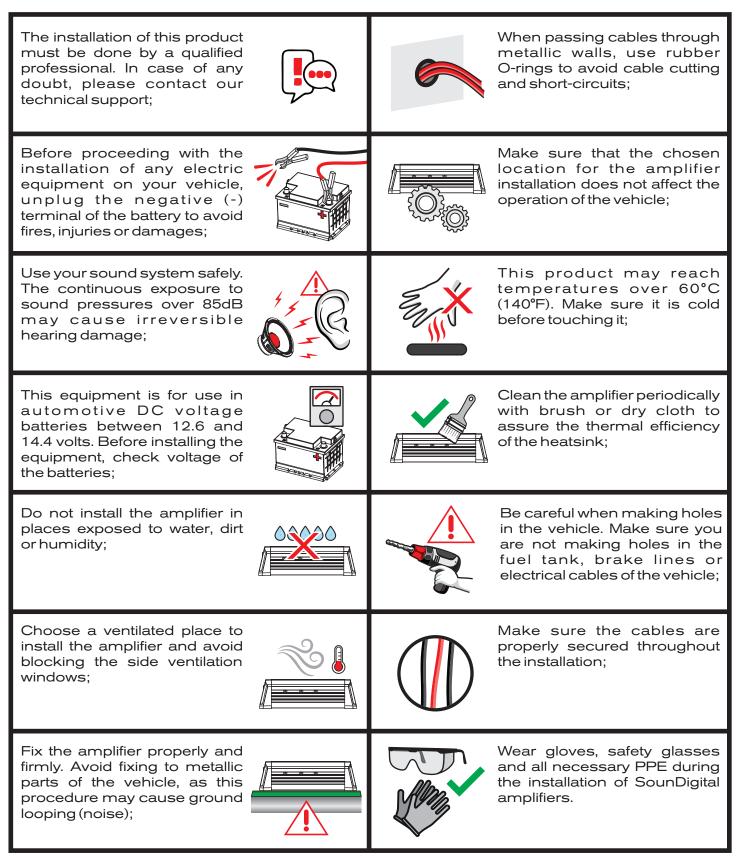



THIS "WARNING" SIGN ALERTS THE USER OF IMPORTANT INFO. NOT FOLLOWING THESE INSTRUCTIONS MAY CAUSE INJURIES TO THE USER OR DAMAGE TO THE EQUIPMENT.

DYNAMIC THERMAL MANAGEMENT - DTM®

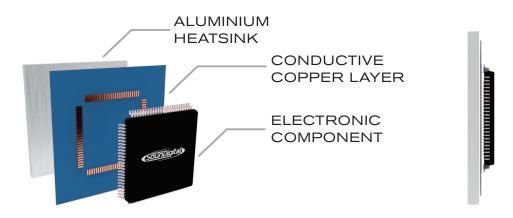

The **DTM**[•] is a dynamic thermal recovery system which always maintains a high efficiency of the amplifier by accelerating the thermal exchange of electronic components with the heatsink.

*Patent required.

ULTRA COMPACT PCB

An intelligent layout, with great use of the PCB area and the use of modern components with reduced structure guarantee **SounDigital** products a compact design, at the same time robust and with excellent thermal efficiency.

ROBUST CONSTRUCTION


Thinking about the application of power sports, the product has an extremely robust assembly, both the fixing points and the layout of the PCB were designed to withstand high vibrations, bumps and impacts.


I-POWER SUPPLY

SounDigital amplifiers are known for their low consumption of battery, and this feature stays on the **EVOPS Line**. The new **I-POWER SUPPLY** is even more modern, which replaces the old toroidal transformers by a new generation of "E-E" core transformers delivers efficiency above 90%*, ensuring more hours of sound without battery recharge.

*Efficiency measured at power supply only.



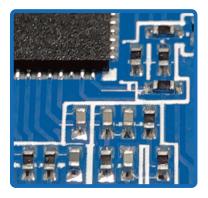

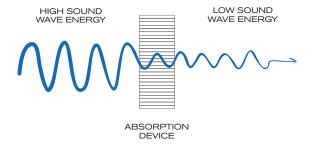


VIBRATION ABSORPTION SYSTEM - VAS[®]

Our **VAS**[®] Technology reduces all impact caused by vibration on the electronic circuit board. This can include road vibration and even vibration caused by sound waves, increasing the reliability of our amplifiers.

REDUCED SIZE

The technology used in our amplifiers bring both high performance and power a compact chassis, providing flexible installation solutions for vehicles with limited space.

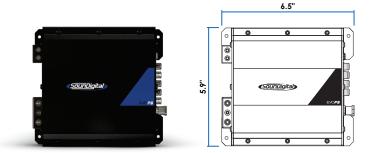




FULL RANGE

The **1200.1 EVOPS** amplifier is a versatile product that cover the entire audible frequency range, any type of loudspeaker or music program.


MARINIZATION WITH PROTECTION INDEX IP64

The product is protected against ingress of dust particles and water droplets from all sides, beyound that, the PCB receives a conformal coating treatment to protect the components from moisture.



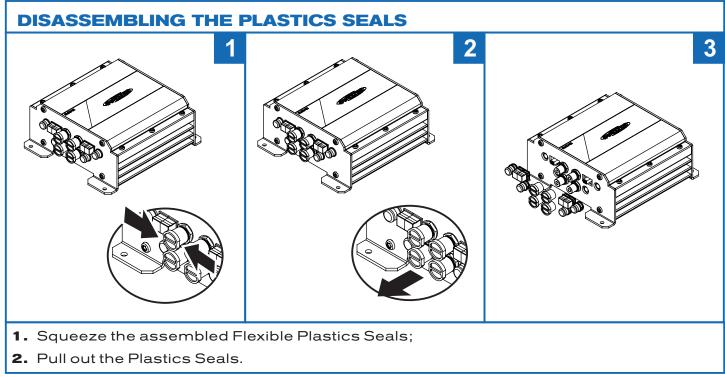


*Merely illustrative images.

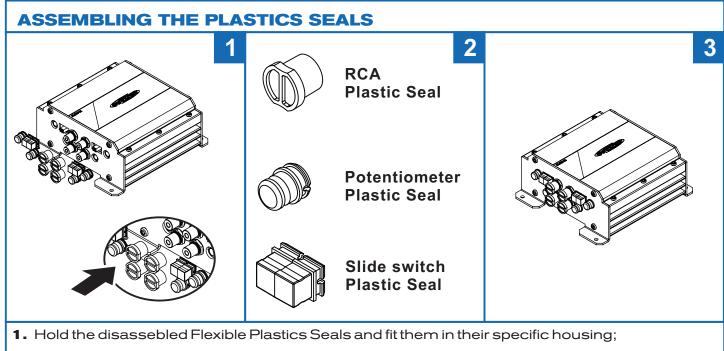

- 2. Each connector has its specific Plastic Seal;
- **3.** Make sure the Flexible Plastics Seals are perfectly fitted.


*Merely illustrative images.

Audio inputs and controls

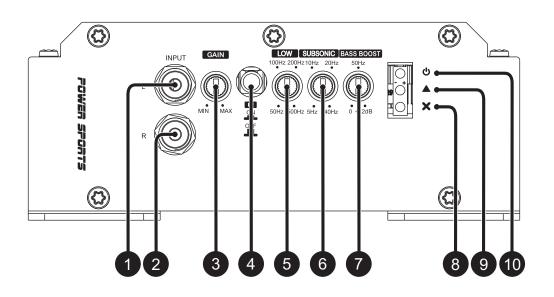

1	Left Channel	Audio inputs — RCA connectors	
2	Right Channel		
3	-	Variable Gain Control	
4	-	Low pass filter ON/OFF switch key	
5	-	Variable "LOW" filter control (50Hz ~ 500Hz)	
6	-	Variable "SUBSONIC" filter control (5Hz ~ 40Hz)	
7	-	Variable "BASS BOOST" control 50Hz (0dB ~ +12dB)	
8	Red	"PROTECTION" LED indicator	
9	Yellow	"CLIP" LED indicator	
10	Blue	"POWER ON" LED indicator	

Power inputs and audio outputs

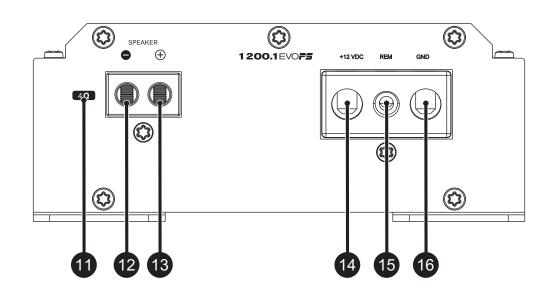

11	-	Minimum speaker load allowed (impedance)	
12	Speakers output	Negative speaker connector (-)	
13	connectors	Positive speaker connector (+)	
14	-	Positive power supply connector (+12VDC)	
15	-	Remote power supply connector (REM)	
16	-	Negative power supply connector (GND)	



BEFORE PROCEEDING WITH THE INSTALLATION, UNPLUG THE NEGATIVE TERMINAL FROM ALL OF THE BATTERIES, TO AVOID FIRE, DAMAGE TO THE AMPLIFIER AND THE Warning! USER HIMSELF.


- \triangleright Mount the amplifier in such a way you have access to the connectors;
- Install the power cables in the vehicle/vessel properly, starting from the battery to the fuse holder or circuit breaker, use the cable with the appropriate size. Make all connections, install fuse holders or circuit breakers, but without placing the fuses or with the circuit breakers in the "OFF" position;



THE MAXIMUM DISTANCE FOR THE INSTALLATION OF THE FUSE/CIRCUIT BREAKER IS 12 INCHES (30cm) AWAY FROM THE BATTERY.

- Warning!
- ≻ Connect the power cables in to the amplifier, observing the polarity. Connect all the positive cables (+) from the fuse holder or circuit breaker to the positive conector of the amplifier and all the negative power cables from the batteries to the negative connector of the amplifier;
- The ground cable must be as short as possible and must be connected to the negative connector of battery or vehicle chassis in case of metallic chassis;


Remove the paint between the terminal and chassis

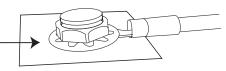

- Install the signal input cables in a proper way, distant from the power cables;
- Connect the RCA cables to the head unit and amplifiers;
- Install the audio output cables with the appropriate section, distant from the power and \geq audio input cables;
- \geq Connect the audio output cables to the amplifier and speakers respecting the positive (+) and negative (-) polarities;
- Install the remote cable with the power cables, using 1.5mm² (15 AWG) cable or thicker; \geq
- Connect the remote power cable to the amplifier's "REM" terminal at the main unit's remote \geq power output;
- Before powering the system, verify all the connections and make sure there are no mistakes or short-circuits on the power and ground cables;
- Reconnect the ground of the batteries; \geq
- Check if the head unit is turned off and then place the fuses in the fuse holders or switch the circuit breakers on:
- Turn on the main unit and the amplifier will turn on the "POWER ON" LED indicating that it is in operation.



Minimum recommended installation distance between amplifiers*. 1.18in (30mm) (SounDiait

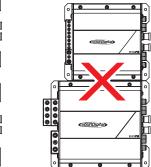

ELECTRICAL DIMENSIONING

For proper operation of your SounDigital amplifier, you need the proper dimensioning of the electrical system and the cables used.

The table below shows the minimum section of GND cables, +12VDC cables and speaker output cables according to the power generated by the amplifier.


1200 WRMS	POWER CABLE (+12VDC) GROUND CABLE (GND)	16mm² (5 AWG)
	SPEAKER CABLE	2mm² (14 AWG)

We recommend the use of only OFC (Oxygen Free Copper) cables on the installation of our products.

Copper-clad aluminum wire (CCAW) must not be used.

AUDIO INPUTS


RCA inputs

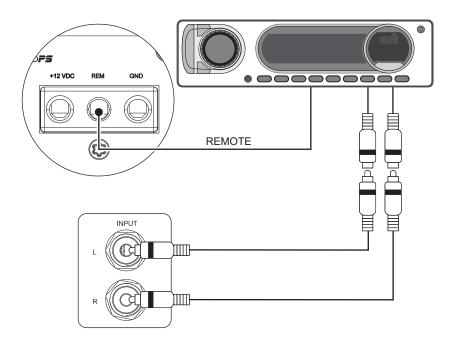

Using Bass Boost

The Amplifier Bass Boost setting enables the user to boost the sound intensity at low frequencies of the sound system, where boost intensity can be adjusted.

This is a semi-parametric equalizer type circuit with "Q" value for the fixed filter, with an intensity boost adjustment from 0 to +12dB (16 times), and a central frequency adjustment of the filter in 50Hz, making it versatile for several types of sound systems.

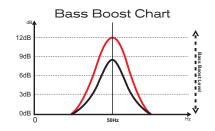


How to adjust Bass Boost

Reproduce your favorite song and set the boost intensity between 0dB and +12dB at the variable control level according your preference.

How to adjust the Crossovers

For full range application, select the "LP" key in the "OFF" position and the "SUBSONIC" variable control at 5Hz. All frequencies will be reproduced according to figure bellow;

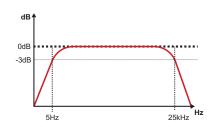


0 +12dB LOW SUBSONIC 100Hz 200Hz 10Hz 20Hz 100Hz 200Hz 10Hz 20Hz 00Hz 500Hz 5Hz 40Hz 0FF


BASS BOOST


50Hz

To set the "SUBSONIC" variable control between 5Hz and 40Hz ("A") where you want to perform the subsonic cut filter;

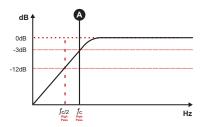

Set in the "LOW" variable control between 50Hz and 500Hz ("B") where you want to perform the low pass cut filter and select the "LP" key in position "ON".

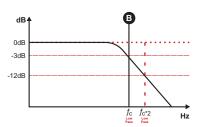

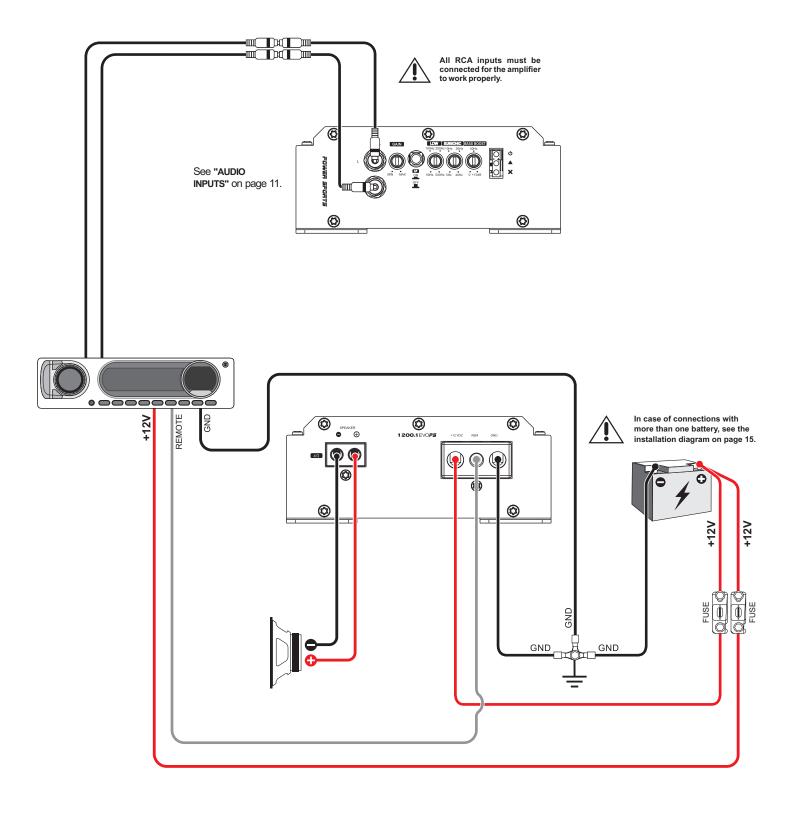

Model	Minimum impedance
1200.1 EVOPS 4Ω	4Ω

GAIN SETTING

Necessary equipament:

- Digital AC voltmeter;
- Media with sine wave test tone 60Hz recorded at 0db;
- > 1/8" screwdriver (for gain setting).

Set up procedure:

- Turn the gain control all the way down;
- Disconnect the output cables from the amplifier outputs;
- Turn off all processing (bass, treble, loudness, EQ, etc.);
- Set the audio player volume to 3/4 of full volume;


- On the audio player, set the fader control to center position;
- Set the "LP" switch to "OFF";
- \blacktriangleright Use a 60Hz sine wave;
- Connect the AC voltmeter to the speaker output connectors of the amplifier. Make sure you test the voltage at the correct connectors (+ and -);
- Increase the gain control until the target voltage is observed with the voltmeter (see the chart below);
- Once you have adjusted the amplifier to the correct voltage output, turn off the source unit and reconnect the speaker(s).

MODEL	STEREO / POWER	STEREO OUTPUT VOLTAGE
1200.1EVO F5	4Ω / 1200W	69.3V RMS

Download the tracks for set up in https://soundigitalusa.com/tracks-for-set-up/


When necessary the association of one or more battery banks to supply the necessary current to the amplifier, it is recommended to use batteries of the same brand, model, and if possible the same manufacturing lot so that the system has the maximum performance.


For an ideal energy performance, we recommend that all batteries be connected to positive and negative busbars and the busbars connected to the amplifier, as shown in the diagram below:

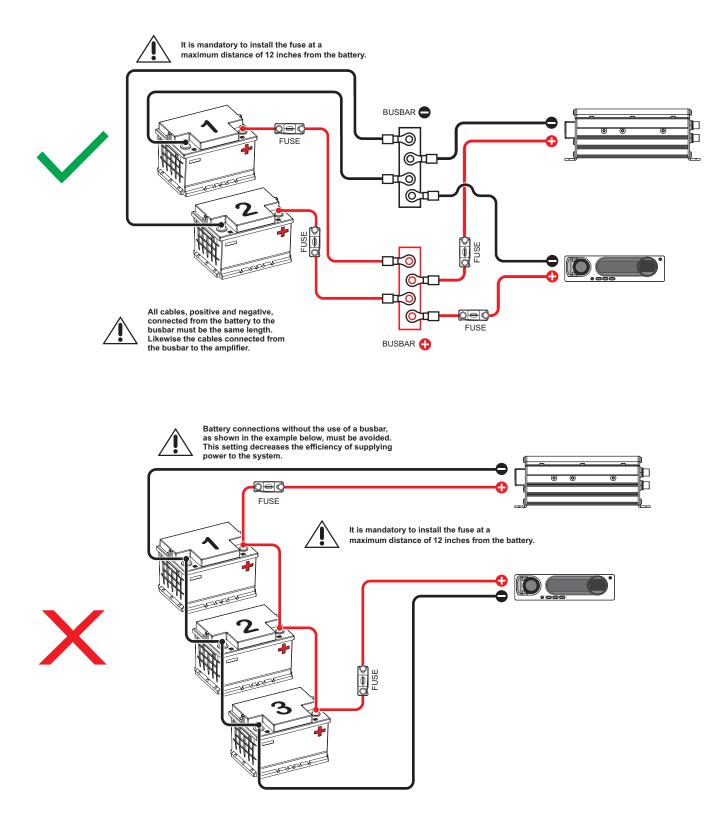

PARAMETERS	1200.1ΕVO F5 4Ω
Power RMS @ 8Ω**	792W
Power RMS @ 4Ω**	1200W
Power RMS @ 2Ω**	N/A
Frequency Response (-3dB)	5Hz ~ 25kHz
Subsonic filter (12dB/octave)	5Hz ~ 40Hz
Low Pass filter (12dB/octave)	50Hz ~ 500Hz
Bass Boost	0dB ~ 12dB @ 50Hz
Operating Voltage	9V ~ 16V
SNR	90dB
Input Sensitivity (RCA)	0.2V ~ 2V
Input Sensitivity (High Level input)	N/A
Current Draw (music)	45A
Current Draw (max.)	90A
Total Efficiency	92%
Damping Factor (@100Hz nominal impedance)	>2000
Power Cable	16mm ² (5 AWG)
Speaker Cable	2 x 2mm² (14 AWG)
Remote Cable	1.5mm² (15 AWG)
Recommended Fuse* (music)	50A
Recommended Battery (minimum)	60Ah
*It is mandatory to install the fuse at a maximum distance of 12 inches from the battery. **Power at 14.4V @ 60Hz with a maximum THD of 1%.	"POWER RATING ACCORDING TO CTA-2006 INDUSTRY STANDARDS.

DIMENSIONAL DATA

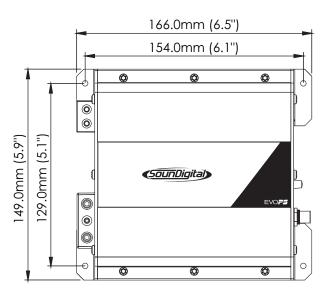

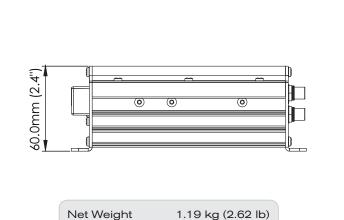

1.38 kg (3.04 lb)

Gross Weight

ADDITIONAL INFORMATION

The values presented are based on measurements performed in SounDigital's laboratories. All the equipment used in the assays, tests, measurements and gauging of the technical parameters of SounDigital products were calibrated in certified laboratories, thus ensuring the performance and standard of excellence of the developed products.

The Manufacturing Process may present variations, and the electronic components may also present changes in values in relation to their nominal parameters. Thus, causing small differences between measurements taken. Small variations in the values presented and divulged by SounDigital are recognized.

Updates of information made in this document will always be published and made available for consumer consultation, free of charge, on the brand's websites. The user is advised to search for the manual in its latest version when necessary.

The images presented in this document are representative and merely illustrative; therefore, they do not necessarily correspond to the actual product/model.



POWER SPORTS











SOUNDIGITALUSA

